

Manual of CP-06

For Android radio

Apk: "Autoplay box"

Steps:

1. Install the apk in your Android radio. The name of the app is "Phonelink"
2. Plug your Iphone or Android phone 's USB cable to the dongle.

For Wince radio


"Wince.zip"

Steps:

1. Release the "zip" file to the file named "Autobox"
2. Copy the "Autobox" into a TF card (Which means you replace the map card,and use the carplay online map when you need navigation)
3. Make the setup - set the navigation path - select the " Autoplaybox.exe" (pic



1,2)

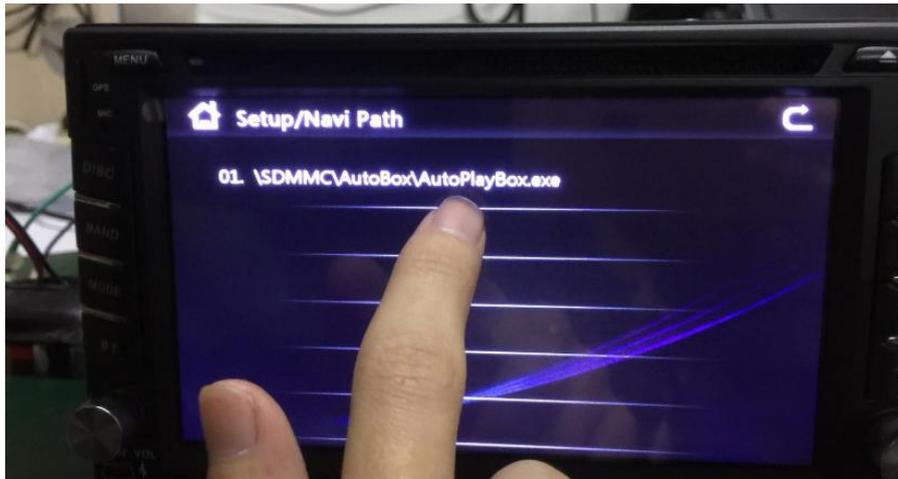

4. How to go to Carplay - Select icon" navigation" (pic 3)



4. Boot logo - plug your phone to the dongle.





Note: if you can make siri control your carplay function, that means the dongle is suitable for this Wince radio.