

## Installation Manual Double DIN Kit



9. Attach metal mounting brackets to Double-DIN navigation

Connect all required circuit points

Place Double-DIN navigation on dashboard and fix it with OEM screws



10. Remove OEM panel holding hazard light switch and clock.



Mount OEM panel to fascia plate **in case of inaccurate mounting position:** cut upper part of OEM panel holder holes (see arrows) to a flat hole in order to get more flexibility for adjustment



11. Connect harness for panel with hazard light switch

Place fascia plate on dashboard

Reinstall everything in reverse order



12. Dashboard with installed Double-DIN navigation



## Installation Manual


### Double DIN Kit

Double-DIN: 381275-05  
with pocket: 281275-05

## • SsangYong Korando 2011->

Compatible with these double DIN devices

### Double DIN Navigation

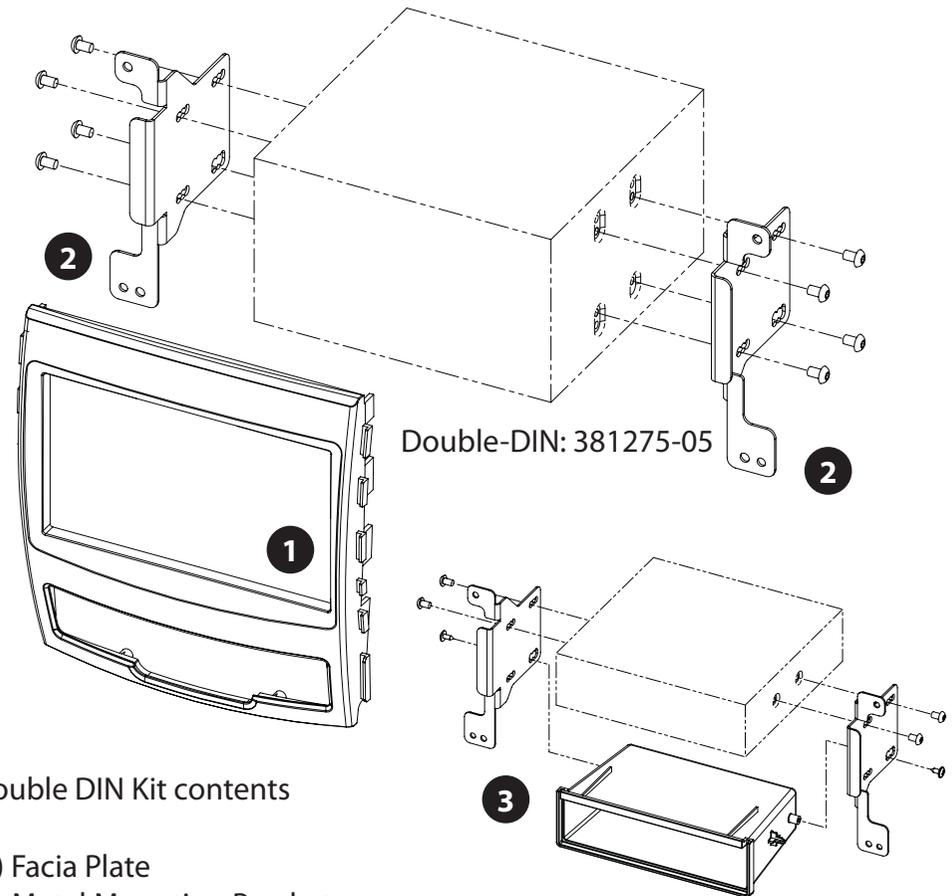

Double DIN Kit contents

- (1) Facia Plate  
(2) Metal Mounting Brackets  
(3) pocket ( part-no.: 281275 only!)

with pocket: 281275-05

All installation work must be performed by a qualified professional installer only.  
The manufacturer / dealer is not liable for any kind of incidental or indirect damages.

## Installation Manual Double DIN Kit



1. SsangYong Korando with OEM head unit



2. Open glove box - remove two screws beneath silver panel



3. Unclip and remove silver panels at left and right side carefully  
(we recommend using a plastic wedge)




4. Remove 2 screws beneath tachometer unit cover left and right side  
  
Pull tachometer unit cover towards your direction

## Installation Manual Double DIN Kit



5. Pull out air vent towards your direction

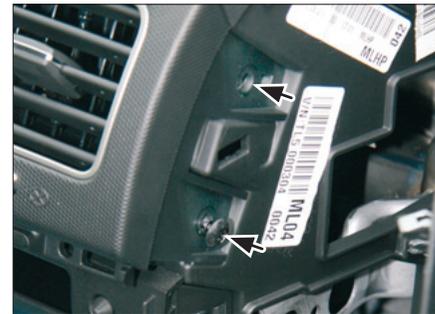

6. Open right door  
Remove side cover  
  
Remove 2 screws (see arrows)



7. Remove whole panel with integrated air vents



8. Remove screws of OEM-head unit. Remove OEM head unit by pulling it towards your direction  
  
Pull out radio harness carefully