



INSTALLATION INSTRUCTIONS FOR PART 99-9230G

Volvo S80 1999-2006 99-9230G


KIT FEATURES

- ISO DIN radio provision with pocket
- ISO DDIN radio provision
- *Painted gray to match factory finish*



KIT COMPONENTS

- A) Radio trim panel • B) Radio housing • C) Pocket • D) (4) #8 x 3/8" Phillips screws • E) (4) Panel clips

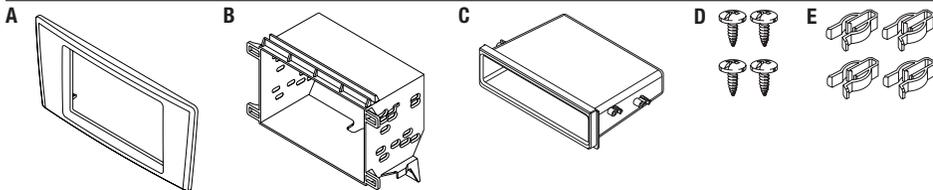

WIRING & ANTENNA CONNECTIONS (sold separately)

Wiring Harness: • 70-9221 • 70-9223 (amplified models)

Antenna Adapter: • 40-VL10

Table of Contents

Dash Disassembly	2
Kit Assembly	
– ISO DIN radio provision with pocket.....	3
– ISO DDIN radio provision	3


TOOLS REQUIRED

- Panel removal tool • Phillips screwdriver
- T-25 Torx driver


CAUTION! All accessories, switches, climate controls panels, and especially air bag indicator lights must be connected before cycling the ignition. Also, do not remove the factory radio with the key in the on position, or while the vehicle is running.

Dash Disassembly


1. Unsnap the gear shifter trim panel. (Figure A)
2. Unsnap the gear shifter boot to separate it from the gear shifter trim panel and remove the trim panel. (Figure B)
3. Remove (2) T-25 Torx head screws from bottom of the climate controls. (Figure C)

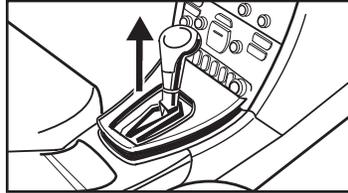

(Figure A)

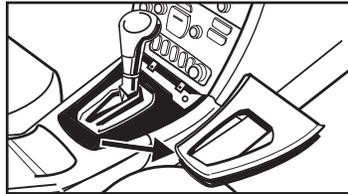


(Figure B)

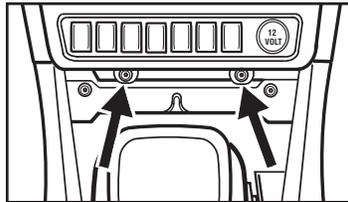


(Figure C)

4. Unsnap the climate controls from bottom edge of the radio. Unplug and remove the climate controls. (Figure D)
5. Remove (2) T-25 Torx head screws from bottom of the radio. Unplug and remove the radio. (Figure E)

Continue to Kit Assembly

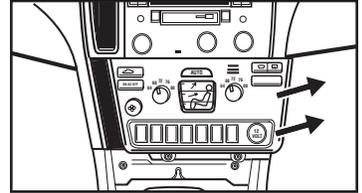

(Figure D)

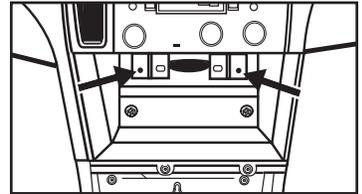

(Figure E)


Kit Assembly

ISO DIN radio provision with pocket

1. Secure the *pocket* to the *radio housing* using (4) #8 x 3/8" Phillips screws provided. (Figure A)

Note: *Rounded edge of pocket faces towards the bottom.*


2. Remove the metal DIN sleeve and trim ring from the aftermarket radio.
3. Slide the radio into the completed assembly, and then secure it to the assembly using screws supplied with the radio. (Figure A)
4. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
5. Reassemble the dash in reverse order of disassembly.
6. Attach (4) *panel clips* supplied to the *radio trim panel*, and then snap the panel over the radio.

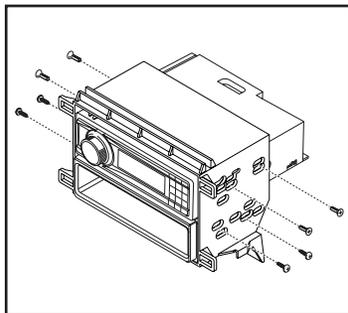

(Figure A)

ISO DDIN radio provision

1. Slide the radio into the *radio housing* and secure it using screws supplied with the radio. (Figure A)
2. Locate the factory wiring harness and antenna connector in the dash, and complete all necessary connections to the radio. Metra recommends using the proper mating adapter from Metra and/or AXCESS. Test the radio for proper operation.
3. Reassemble the dash in reverse order of disassembly.
4. Attach (4) *panel clips* supplied to the *radio trim panel*, and then snap the panel over the radio.

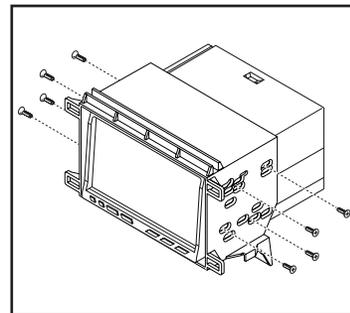

(Figure A)



INSTALLATION INSTRUCTIONS FOR PART 99-9230G



IMPORTANT

If you are having difficulties with the installation of this product, please call our Tech Support line at 1-800-253-TECH. Before doing so, look over the instructions a second time, and make sure the installation was performed exactly as the instructions are stated. Please have the vehicle apart and ready to perform troubleshooting steps before calling.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.



Metra recommends MECP certified technicians

REV. 5/1/2017 INST99-9230G